

# WEST HILL WAGON WORKS

01623 759 939 • [westhillwagonworks.com](http://westhillwagonworks.com)

## Modern Image Platform Kit Instructions



West Hill Wagon Works Product Codes -

4WH1003501 - Modern Image Platform Kit - OO Gauge


4WH1003601 - Modern Image Platform Kit - OO Gauge - Extension Pack (250mm)

For West Hill Wagons Works Station / Platform Accessories scan



[www.westhillwagonworks.co.uk](http://www.westhillwagonworks.co.uk)

# Modern Image Platform Base Instructions

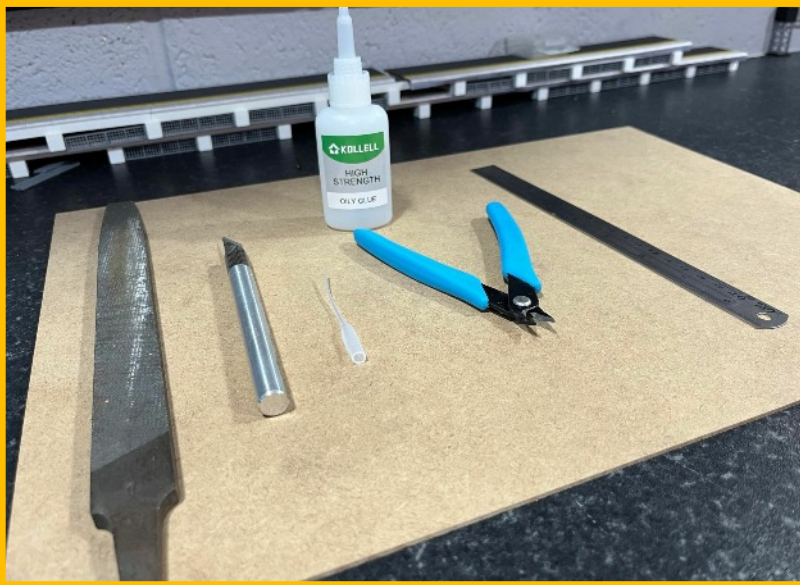


## Tools Advised:

- Super Glue/Adhesive
- Fine Sprue Cutters
- Sharp Model Knife
- File
- Metal Rule

## Parts Included:

- 1: 2 x Platform Tops (MDF)
- 2: Sprue of White Concrete Base
  - (a) Concrete End Support Blocks - Qty:2
  - (b) Concrete Centre Support Blocks - Qty:9
  - (c) Concrete End Support Beams - Qty:4
  - (d) Concrete Centre Support Beams - Qty:6
- 3: Sprue of Grey Metal Grids
- 4: Self Adhesive Platform Sticker Tops





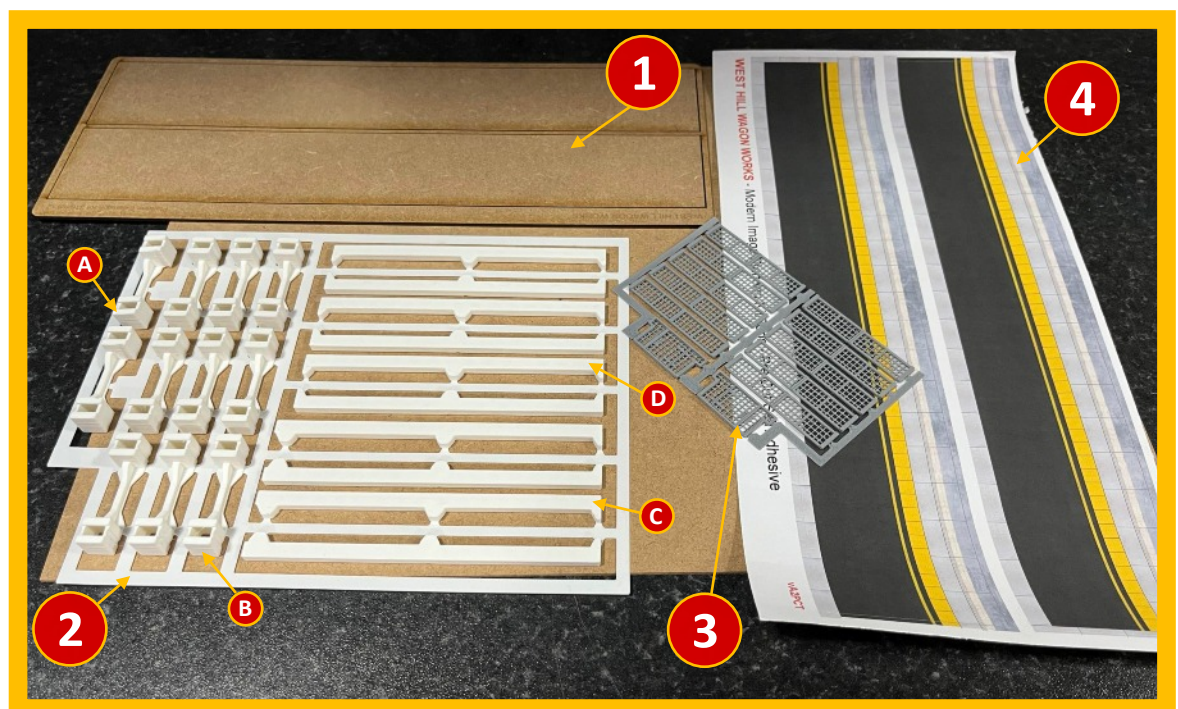




# Modern Image Platform Base Instructions

## 1 - Removing Components from Sprue



Carefully using a sharp knife, with the sprue on a cutting mat or suitable surface, remove the Concrete Base (2) & Grey Metal Grid (3) components from the sprue.

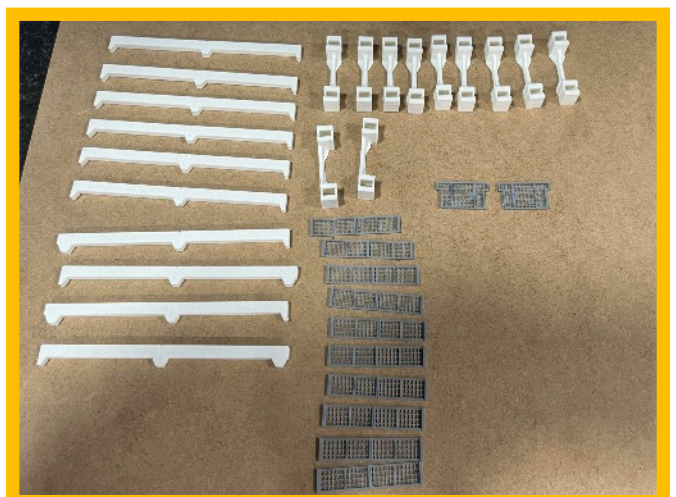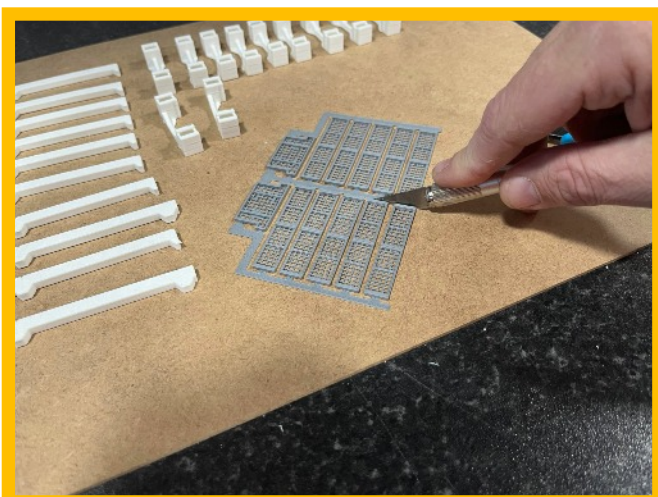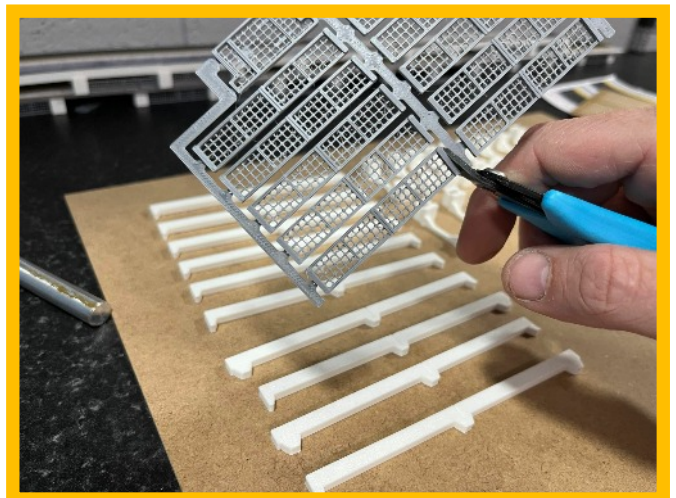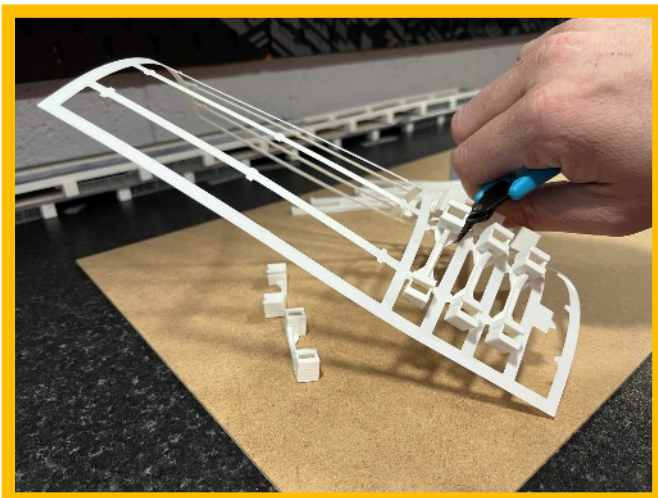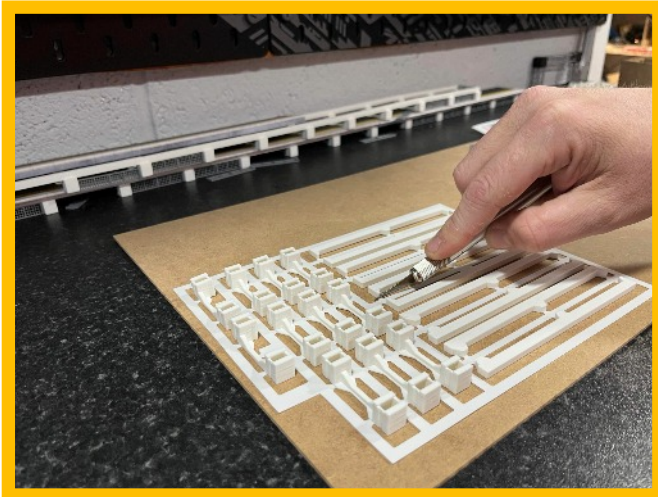




# Modern Image Platform Base Instructions



## 2 - Assembling Base Structure

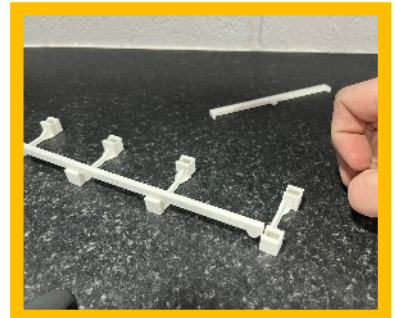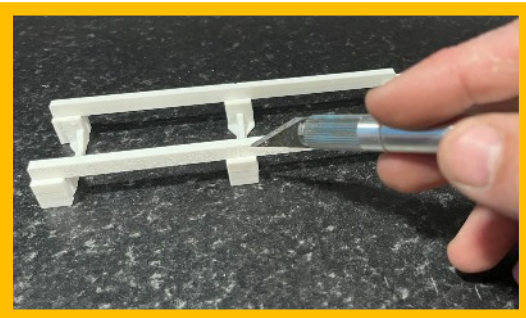

Dry fit first, ensuring that the textured side of each piece is facing outwards. Please note that the End Support Blocks (2a) are different to the Center Support Blocks (2b) and should be orientated at each end of the platform as shown in the picture below

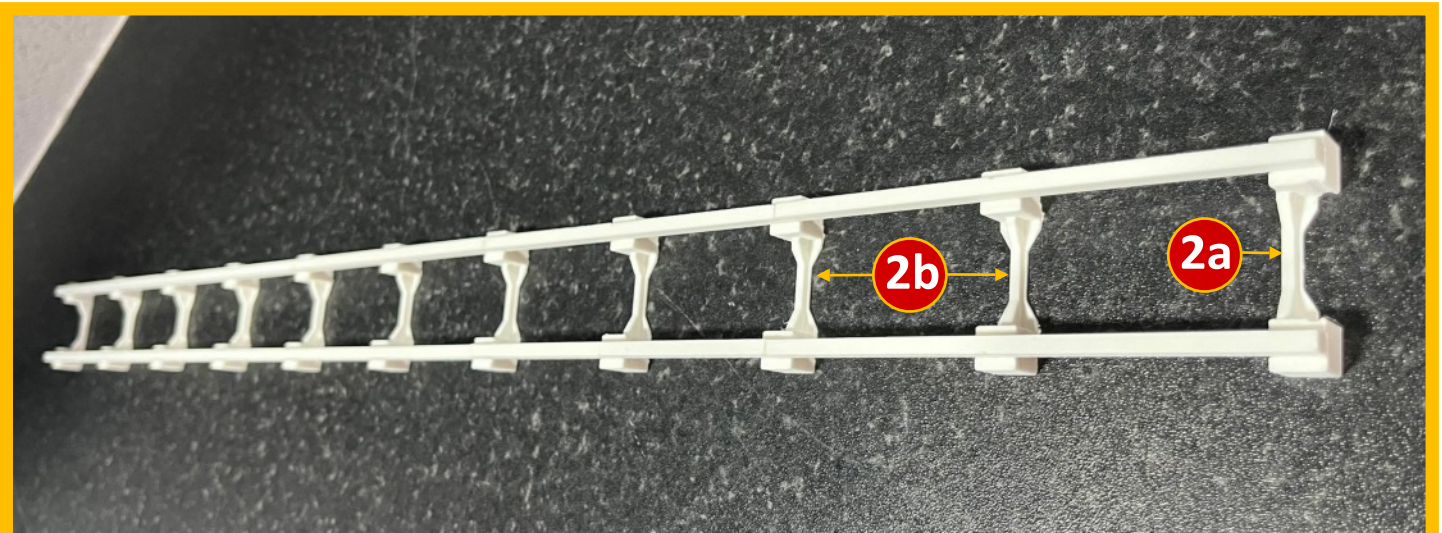

Once you're happy with the dry test fitment, apply glue to each Base Support in-turn and re-insert the Top Beams firmly into place. After the glue has completely dried, rotate the platform upside down for the next step.



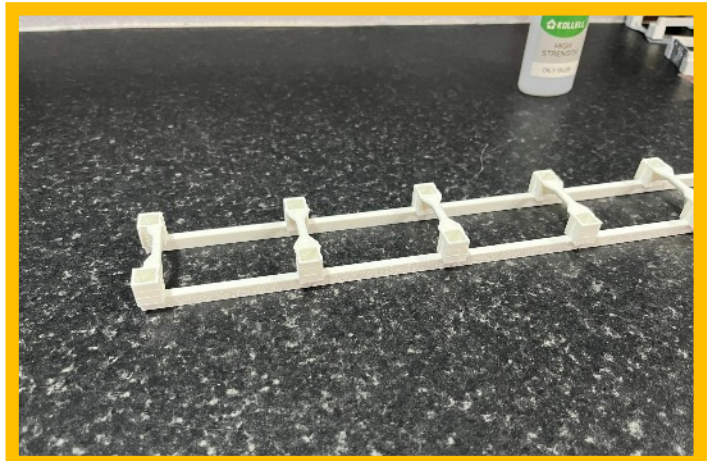
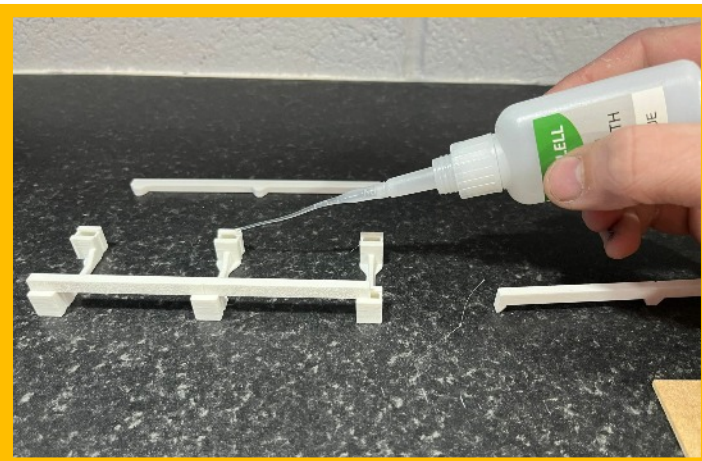




# Modern Image Platform Base Instructions

## 3 - Inserting Lower Metal Grids

Apply a small amount of glue to the top edge of each Metal Grid (3) and slide fully into the slots along the underside of the platform. Repeat with the Metal Grids at each end.

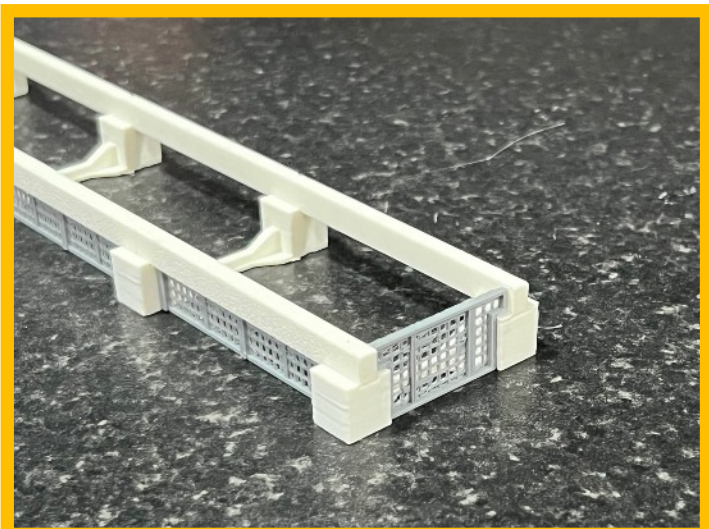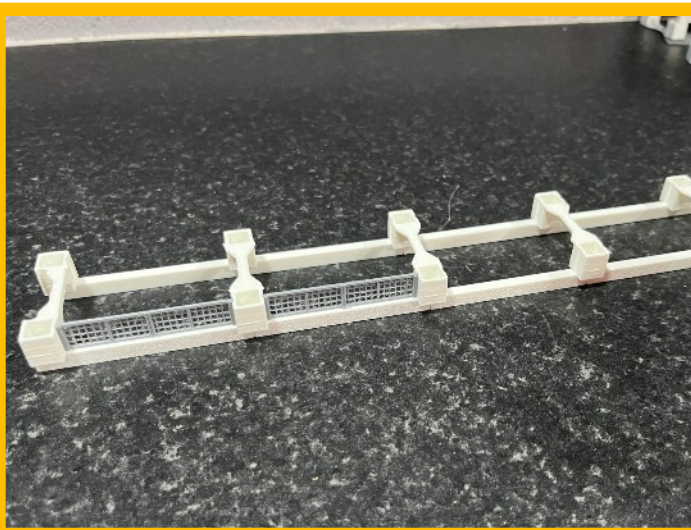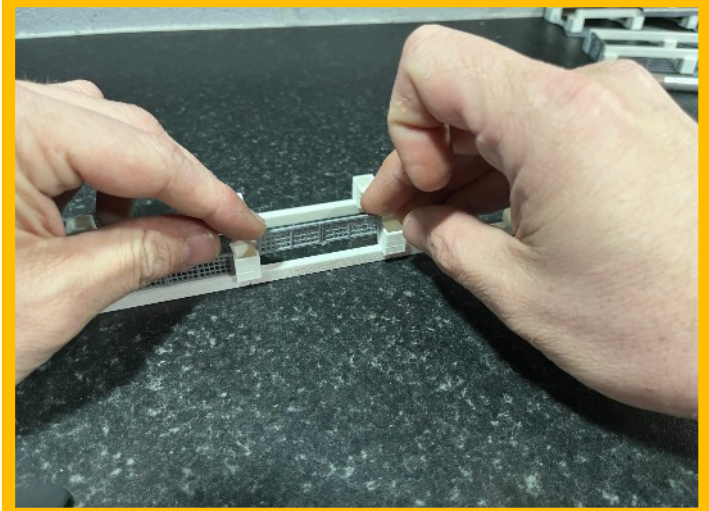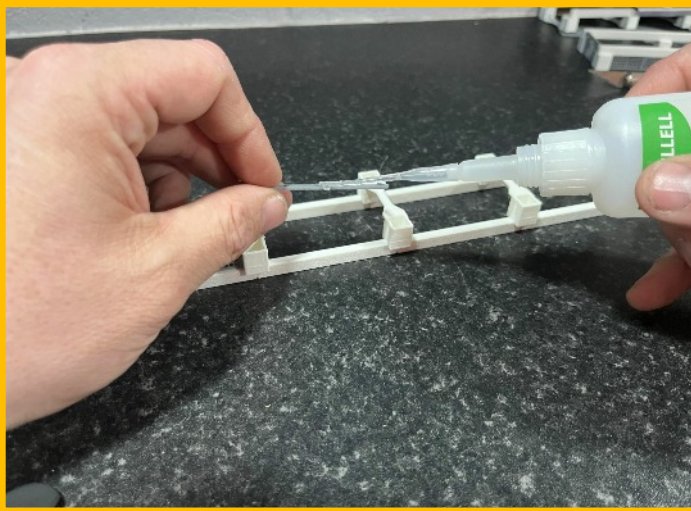




# Modern Image Platform Base Instructions

## 4 - Preparing Platform Tops



Place the MDF Platform Top Pieces (1) on a cutting mat or suitable surface. Using a sharp knife, carefully remove each top piece.

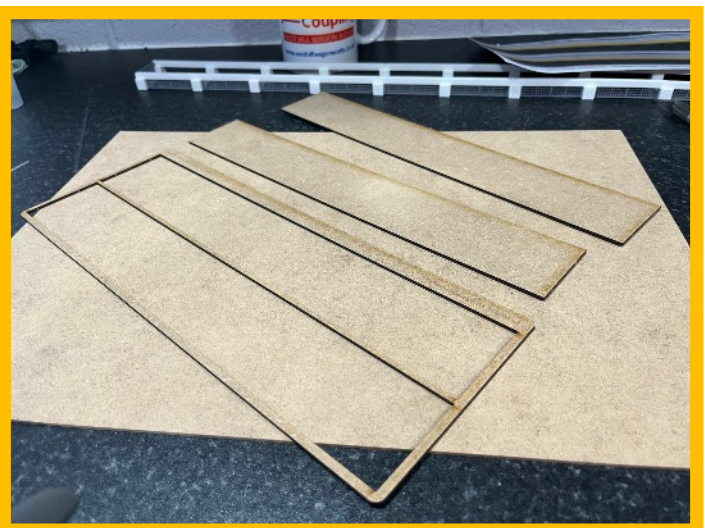

Ensure any remains of the sprue tabs are removed from the ends of the platform tops using a file. It is recommended to apply some grey paint to the side and rear edges of each platform top piece, then allow to dry thoroughly before moving to the next step.




# Modern Image Platform Base Instructions

## 5 - Platform Top Stickers

Place one MDF Platform Top Piece (1), top-side upwards on a flat surface. Carefully peel one Platform Top Sticker (4) from the sheet and align a rear corner of the sticker with the rear corner of the top.



Ensure the back edge is aligned along the whole length of the platform top. Smooth the sticker along the top ensuring there are no creases or air bubbles. Note that the sticker will overhang the front of the platform top.

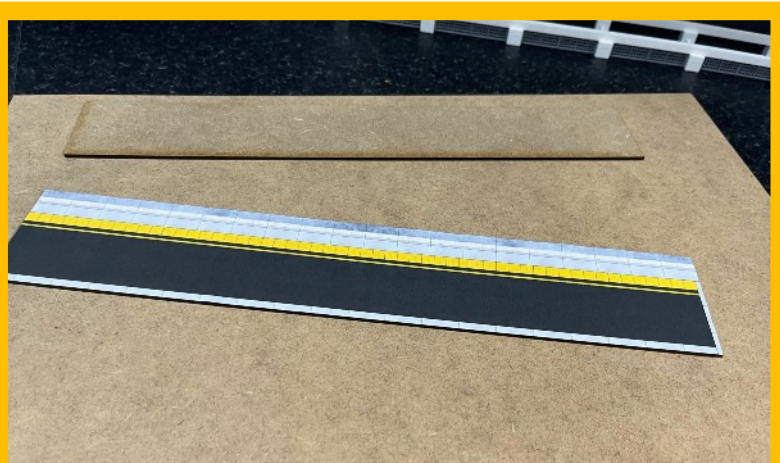






## Modern Image Platform Base Instructions

### 5 - Platform Top Stickers cont.


Turn the platform top upside down of a clean and flat surface. It is recommended to apply a small amount of glue along the front edge of the underside of the platform top.

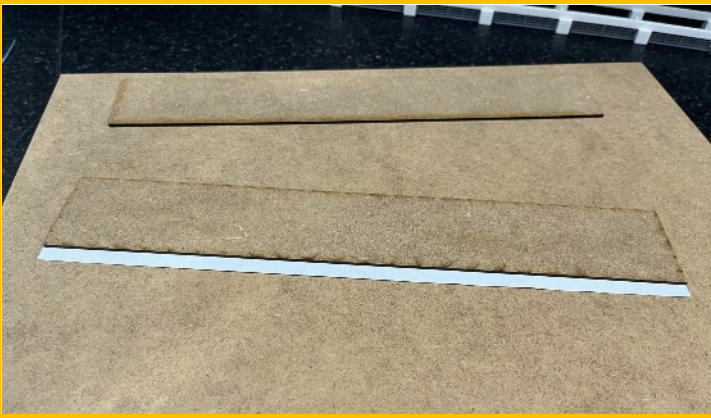

Lift the rear of the platform top and rotate forwards. Ensure that the front edge of the platform remains in contact with the work surface, slowly rotate over so the sticker folds itself around the front edge of the platform top. Ensure the sticker is smooth along and around the edge of the platform top and press down firmly. Leave to dry.

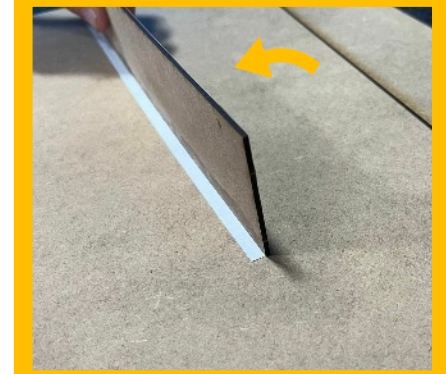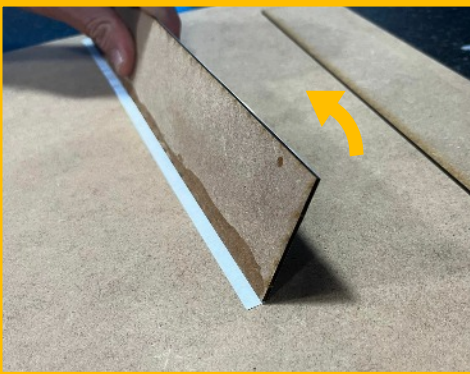

Take care to keep your hands clean and not get glue on the platform top surface.

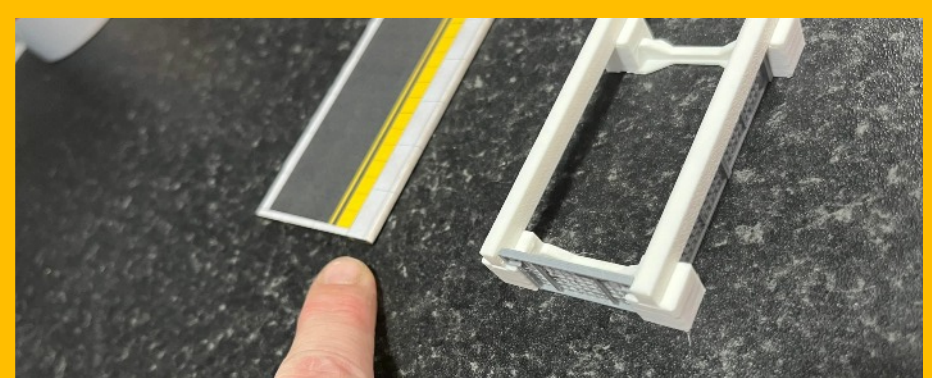




# Modern Image Platform Base Instructions

## 6 - Attach Platform Tops

The platform tops are fitted with the back of each top of aligning with the back and the ends of the assembled platform support structure.

Apply a small amount of glue to the top of the structure and attach the platform tops. Take care to keep your hands clean and not get glue on the platform top surface.

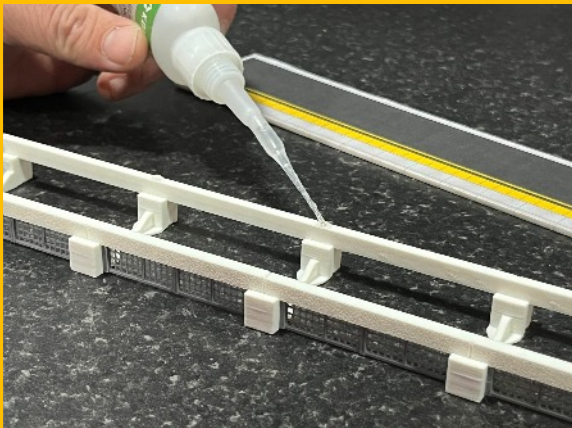

The platform is now ready to put on your layout.

Additional items such as seats, lighting, railings, CCTV cameras, information screens, signs and steps are available at [www.westhillwagonsworks.com](http://www.westhillwagonsworks.com)



West Hill Wagons Works Station / Platform Accessories

